

000293. Travel Pouch with Slide Closure



Material

Universal pen holder (CAUNIPHL1)
 Adhesive sheet – 5 kinds
 Transfer sheet
 Slide closure pouch (A4 size, solid color) – 1
 Slide closure pouch (A5 size, solid color) – 1
 White paper (for positioning) – 2
 Pen
 Masking tape


(1) Insert the pen into the universal pen holder, and then install the pen holder in the machine. (For details, refer to the included instructions.)

(2) After drawing pattern A on the white paper, install the standard cut blade holder, and then cut out the pattern. In the same way, draw, then cut out D.

A




D

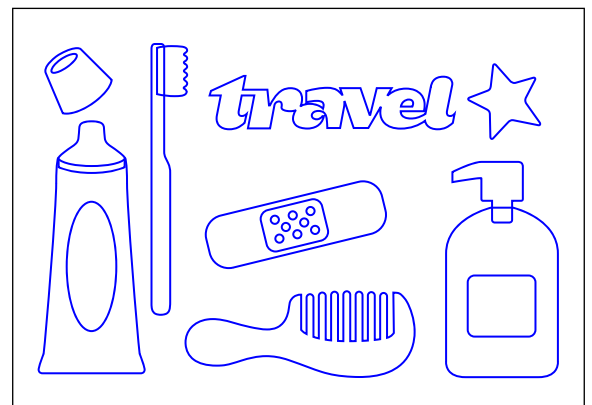

(3) Cut out B, C and E.

B-1

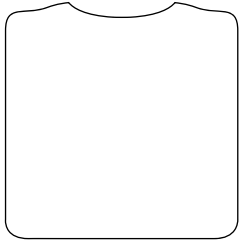


B-2




B-3



B-4

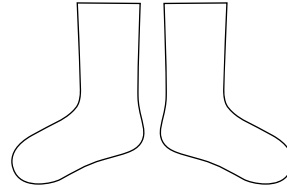


B-5



B-6




B-7

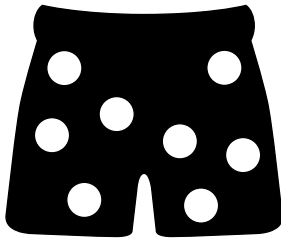


B-8



C-1

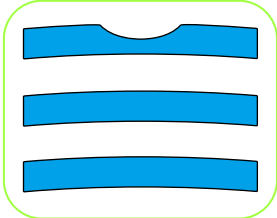

C-2

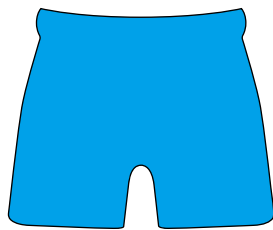


C-3



C-4



C-5

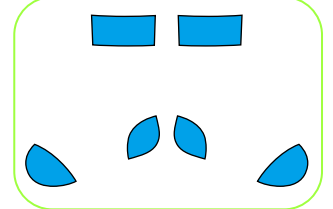

E-1



E-2



E-3




E-4



E-5



E-6



E-7




E-8




E-9



E-10



E-11



E-12



E-13




E-14




E-15




(4) Place the paper from step (2) inside the slide closure pouch, and then use masking tape to temporarily secure it in place.

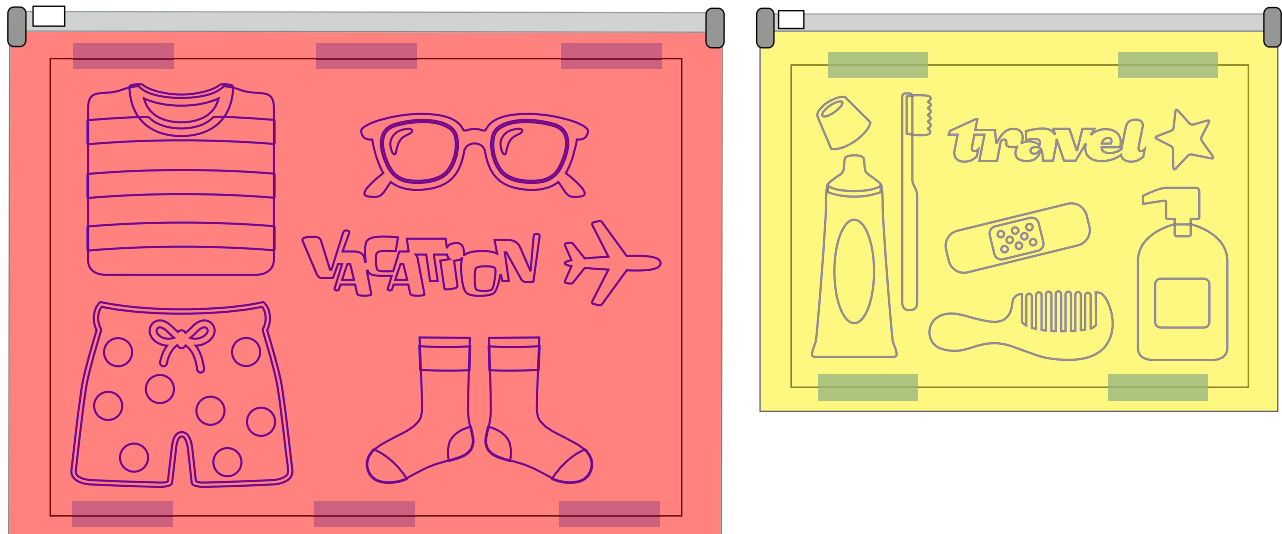

(5) Attach the parts cut from the adhesive sheet to the A4-size pouch so that they align with the drawing lines underneath, as shown below.

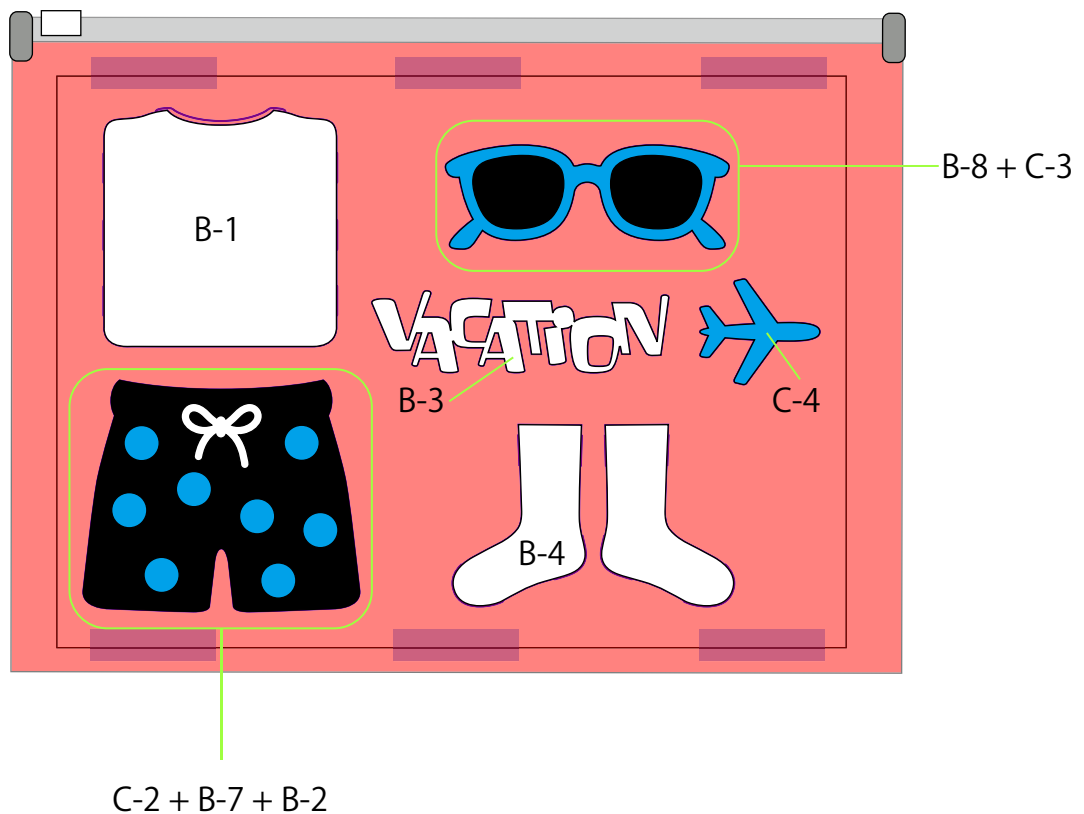

(6) Position C-1, C-5 and B-5 in the transfer sheets. (For details on using the transfer sheets, refer to the instructions included with them.) Affix to the piece from step (5), and then peel off the transfer sheets, as shown below. Finally, attach B-6, and then remove the temporarily attached paper.

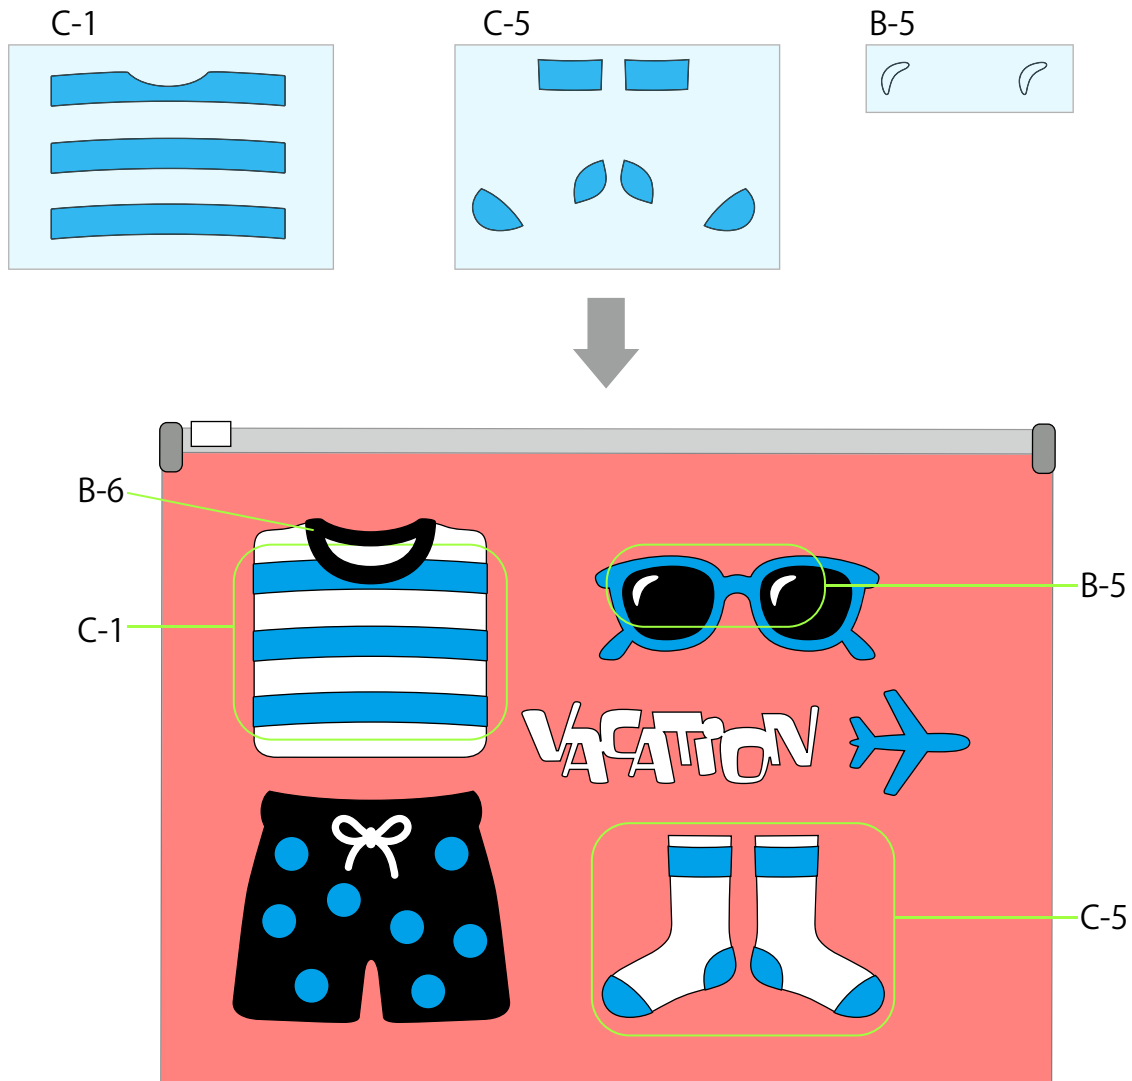

(7) In the same way, attach E to the A5-size pouch as shown below, and then remove the temporarily attached paper.

